




Dolphin PCI Express MXH932 Adapter

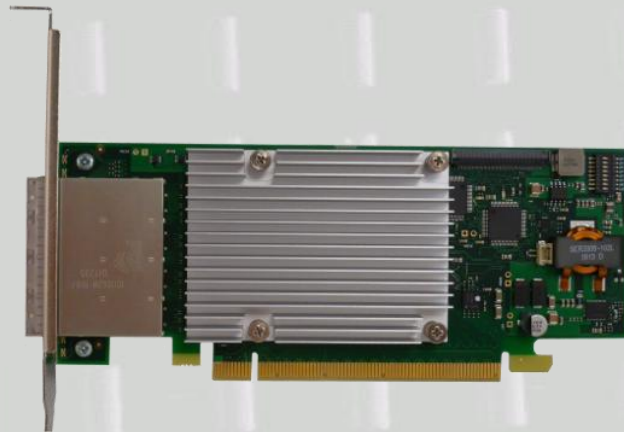

MXH932 Transparent Adapter Users Guide
Version 3.0

Date: 6th January 2025

Table of Contents

DISCLAIMER.....	4
TERMS AND ACRONYMS.....	5
MXH932 HIGH LEVEL SPECIFICATION	6
MTBF BY TEMPERATURE AND ENVIRONMENT	7
PACKAGING	8
PRE-INSTALLATION QUESTIONS.....	8
PCIe SLOT DETERMINATION	8
MXH932 HOST / TARGET CONFIGURATION	8
AIRFLOW - OPERATING ENVIRONMENT	8
CABLE CONNECTIONS.....	8
<i>PCI Express 4.0 Cables.....</i>	<i>9</i>
<i>Active Optical PCIe Cables (AOC)</i>	<i>9</i>
CMI FUNCTIONALITY	9
INSTALLATION	10
STEP 1 - UNPACK BOARD	10
STEP 2 - CHANGE PCIe BRACKET IF NECESSARY	10
STEP 3 - CONFIGURE THE BOARD FOR PROPER OPERATION	10
STEP 4 - ENSURE PROPER AIRFLOW	10
STEP 5 - INSTALL THE ADAPTER CARD.....	10
STEP 6 - INSTALLING AND REMOVING THE CABLE.....	10
<i>Connecting the Cable.....</i>	<i>10</i>
<i>Cable strain relief.....</i>	<i>11</i>
<i>Supported cable lengths</i>	<i>11</i>
<i>Disconnecting the Cable</i>	<i>11</i>
STEP 7 - VERIFY INSTALLATION & LEDs	11
OPERATION	12
CONFIGURATION AND DIP SWITCHES.....	12
<i>DIP Switches.....</i>	<i>12</i>
<i>Thermal shutdown.....</i>	<i>12</i>
<i>DIP Switch settings for MXH932 Host operation</i>	<i>13</i>
<i>DIP Switch settings for MXH932 Target operation</i>	<i>13</i>
TRANSPARENT USE CASES.....	15
<i>Target Card Clocking Option.....</i>	<i>15</i>
<i>Use Case A - 1 Host – Single Expansion Configuration PCIe x16.....</i>	<i>15</i>
<i>Use Case B – 1 Host – Single or Dual Expansion Configuration – PCIe x8.....</i>	<i>15</i>
<i>Use Case C – 1 Host - Quad Expansion Configuration – PCIe x4.....</i>	<i>16</i>
<i>Use Case D – 1 Host – Transparent fan-out using MXS924 - PCIe x16.....</i>	<i>16</i>
<i>Use Case E – Multi Host – Transparent fan-out using MXS924 - PCIe x16.....</i>	<i>16</i>
<i>Use Case F – Transparent Target with two x8 Downstream ports</i>	<i>16</i>
<i>Use Case G – Transparent Target with four x4 Downstream ports</i>	<i>17</i>
EEPROM AND FIRMWARE UPGRADE	18
IDENTIFYING THE CARD.....	18
SUPPORT	19
TECHNICAL INFORMATION	20

BOARD REVISION HISTORY	20
SIMPLIFIED SCHEMATICS	20
PCIe CABLE PORT SIGNALS	21
EXTERNAL PCIe x4 CABLE CONNECTOR PIN-OUT	21
PCIe CABLE PORT MAPPING	21
MXH932 PCIe x16 EDGE CONNECTOR PIN-OUT	22
COMPLIANCE AND REGULATORY TESTING.....	23
LIMITED WARRANTY.....	24
WARRANTY PERIOD.....	24
COVERAGE.....	24
SERVICE PROCEDURE	24

DISCLAIMER

DOLPHIN INTERCONNECT SOLUTIONS RESERVES THE RIGHT TO MAKE CHANGES WITHOUT FURTHER NOTICE TO ANY OF ITS PRODUCTS TO IMPROVE RELIABILITY, FUNCTION, OR DESIGN.

DO NOT USE INFORMATION IN THIS GUIDE TO DESIGN YOUR OWN PCI-SIG COMPLIANT PRODUCT, ALWAYS REFERENCE THE ORIGINAL PCI-SIG SPECIFICATION FOR DETAILS.

TO THE FULLEST EXTENT PERMITTED BY LAW, DOLPHIN WILL NOT BE LIABLE FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS, LOST DATA, OR LOSS OF USE) ARISING OUT OF ANY USE OF DOLPHIN'S PRODUCTS, SOFTWARE OR SERVICE PROVIDED. DOLPHIN'S MAXIMUM LIABILITY WILL NOT EXCEED THE TOTAL AMOUNT PAID FOR THE PRODUCT BY THE PURCHASER.

PCI Express External Cabling specification 3.0 is, as of the release of MXH932, not completed and ratified by the PCI-SIG. The MXH932 is designed to the new specification, but Dolphin cannot guarantee the card will be compliant to the final 3.0 version. Dolphin firmware tools can update the CMI implementation.

LIFE SUPPORT POLICY

DOLPHIN INTERCONNECT SOLUTIONS' PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES.

ENVIRONMENTAL POLICY

Dolphin is minimizing the amount of printed documentation and software CDs in its shipments; please download additional documentation and software from www.dolphinics.com.

Scope

This version of the MXH932 Users Guide is valid for firmware version 12.

Terms and Acronyms

Important terms and acronyms used in this manual

AOC	Active Optical Cable. PCIe fiber cable assembly available from Dolphin.
CMI	Cable Management Interface. The 2-wire management interface for communication between subsystems connected by a PCIe 4.0 cable. Details can be found in the PCI-SIG External Cabling Specification 4.0.
BMC	Board Management Controller - Microcontroller on the MXH932 used to manage and implement CMI communications.
eXpressWare	Dolphin's software stack for PCIe clustering and IO. Please visit www.dolphinics.com/software for more information.
Host mode	The card is installed in a root complex / Host PC.
Hot Add	Attaching an IO Expansion system after the server is booted. System dependent. To Hot Add devices utilizing larger resources, the MXH930 card with Dolphins eXpressWare SmartIO extension should be used. Please contact Dolphin for more information.
Hot Plug	PCIe Configuration option to support hot plug events.
Lane	One PCI Express Lane contains a differential pair for transmission and a differential pair for reception.
Link	A collection of one or more PCI Express Lanes providing the communication path between an Upstream and Downstream Port.
PCIe 4.0 cable	Cable compliant to the PCI-SIG External Cabling Specification 4.0. Support for CMI.
Port	PCIe Cable port. The MXH932 has four x4 ports, named P1, P2, P3, P4. These ports can be merged to two x8 ports, or one x16 port. The physical ports are identified by text on the PCIe brackets.
Target mode	The card is installed in an expansion chassis / backplane.
Wake	A mechanism used by a downstream device to request the reapplication of main power when in the L2 Link state.

MXH932 High Level Specification

The MXH932 is a low profile, half-length PCIe adapter that can be configured as a Transparent Host Adapter card or a Target adapter card. Once installed in any server's or PC's PCI Express compliant slot, a MXH932 can connect to another MXH932 configured for Transparent Target operation or any target device compliant to the PCI Express External Cabling Specification 4.0. The MXH932 configured as a Transparent Target card can be installed in a PCI Express compliant expansion upstream slot. Please contact Dolphin for a list of compliant expansion chassis. The MXH932 supports PCIe Gen1, Gen2, Gen3 and Gen4 speeds and x1, x2, x4, x8 and x16 link-widths. The card will operate at the highest common speed shared between the slot and the card (Gen4) and the widest common link-width (x16).

- PCI Express Base Specification, Rev. 4.0.
- PCI Express CEM Specification, Rev. 4.0.
- PCI Express External Cabling specification 4.0
- PCI Express Gen4 16.0 GT/s per lane signaling – 256 GT/s total signaling.
- PCI Express Gen4 x16 edge connector. The card installs in any PCI Express slot that has a physical x16 connector.
- Compliant with PCI Express Gen1 through Gen3 computers and IO systems, auto detection.
- The MXH932 supports transparent connections to IO systems (Host and Target operation).
- Quad SFF-8644 cable connector
 - Durability max total 250 mating cycles
- Cable port configurations, up to
 - One x16
 - Two x8
 - Four x4
- Microsemi Switchtec PM40036 PFX PCI Express Gen4 chipset.
- 130 nanosecond cut-through latency port to port.
- Support for PCIe 3.0 and PCIe 4.0 SFF-8644 copper cables with CMI and PCIe Active Optical cables.
- Support for active optical fibers up to 100 meters.
- Low profile, Half-length - PCI Express Electromechanical Specification, Rev 4.0.
- Dimensions are 167.65mm (6.600 inches) x 68.90 mm (2.731 inches)
- Comes with both a low profile and a standard profile PCI Express bracket.
- Host clock isolation. Automatic support for host running CFC or SSC mode.
- Prepared for SRIS clocking.
- VAUX powered board management controllers for flexible configuration and cable management.
- Flash recovery option. PFX Multiconfiguration support.
- Maximum power ratings:
 - 12 Volt: 1.66 A (no port power) 2.66 A (max port power)
 - +3.3 Volt: Not connected
 - +3.3 Vaux: 100 mA
- Typical power ratings:
 - 12 Volt: 1.5 A (no port power)
 - +3.3 Volt: Not connected
 - +3.3 Vaux: 100 mA
- Port power supply (per cable port):
 - VPWR: 3.2V - 3.4V, 0.86 A
 - VMGTPWR: 3.2V - 3.4V, 89 mA
- Operating Temperature: 0°C - 55°C (32°F - 131°F), Airflow: 350 LFM (Preliminary)
- Operating Temperature with AOC: TBD
- Relative Humidity: 5% - 95% (non- condensing)
- CE and FCC markings

MTBF by Temperature and Environment

The MTBF (in hours) for the MXH932 can be found in the table below. The numbers are calculated using the Telcordia SR-332 issue 2 (2006) standard.

Ambient Temp [°C]	Environment		
	Ground fixed, controlled	Ground fixed, uncontrolled	Ground mobile
0	4.101.016	2.050.508	683.503
5	3.543.448	1.771.724	590.575
10	3.028.513	1.514.257	504.752
15	2.560.400	1.280.200	426.733
20	2.141.924	1.070.962	356.987
25	1.774.116	887.058	295.686
30	1.456.142	728.071	242.690
35	1.185.515	592.758	197.586
40	958.455	479.227	159.742
45	770.360	385.180	128.393
50	616.260	308.130	102.710
55	491.191	245.595	81.865

Table 1: MTBF vs. Temperature and Environment

Packaging

The MXH932 includes the following components.

- MXH932 Adapter Board with full height profile PCIe bracket mounted
- Low profile PCIe bracket
- Anti-static bag
- Getting started guide

Pre-Installation Questions

Certain steps should be taken prior to installing the MXH932. You should determine the following configuration requirements.

- Which PCIe slot and system will the card be installed in?
- Will the board act as a host adapter or target adapter?
- What is the speed and link width of the slot that the card will be installed in?
- What is the operating environment in which the card will be installed?
- What type and length of cables will be used?
- How to establish proper operational conditions, temperature, and airflow.

PCIe Slot Determination

The MXH932 supports PCIe Gen1, Gen2, Gen3 and Gen4 speeds and x1, x2, x4, x8 and x16 link-widths. The slot width and speed will affect the performance of the card. The card can be physically installed in a x4, x8 or x16 connector. The card will auto configure to the slot speed and width.

MXH932 Host / Target Configuration

The MXH932 can act as either a host adapter or target adapter. The MXH932 has a DIP switch bank to control these functions. The DIP switch labeled SW1 can be found close to the upper edge of the board. The main configuration options are host or target operations. The default DIP switch setting is transparent host x16 operations. Additional settings are target operations, two x8 links, four x4 links, alternative edge clock routing and quad edge target.

Airflow - Operating Environment

To maximize lifetime for the product and maintain the warranty, please honor the specified operating temperature and make sure the specified air flow is present. Special care should be considered when the MXH932 is used in office type cabinets in combination with other high energy consuming PCIe devices, e.g. not active-cooled GPUs:

Operating Temperature: 0°C - 55°C (32°F - 131°F), Airflow: 350 LFM (Preliminary)

Operating Temperature with AOC: TBD

TIP: After installing the Dolphin eXpressWare Board Management software, you can use the tool `dis_diag` to determine the actual board temperatures.

NOTE: The MXH932 link LEDs will start flashing yellow when a PCIe switch temperature of 95°C (203°F) is reached or when the AOC has reached the max operating temperature. Please consult the AOC data sheet for details.

NOTE: The MXH932 card includes overheat protection. The BMC will automatically shut down the MXH932 card if a PCIe switch temperature beyond 105°C (221°F) is detected. Similarly, if an AOC is plugged in, the MXH930 card will automatically shut down if the max operating temperature announced by the connected AOC is violated by 15°C (59°F). Please consult the AOC data sheet for details. The automatic shutdown can be disabled by setting DIP-Switch OPT6.

NOTE: Operating the card or AOC above the maximum specified operating temperature will void the warranty.

NOTE: If the card shuts down due to an overtemperature situation – you must improve the cooling before completely power cycling the system.

Cable Connections

The MXH932 is designed to support both long and short PCIe copper cables as well as PCIe active optical cables (AOC).

The MXH932 cable ports are compliant to the SFF-8644 industry specification and supports PCIe cables compliant to the PCIe External Cabling Specification 4.0. Four x4 cables are needed for full PCIe x16 connectivity.

PCI Express 4.0 Cables

When used with cables compliant to the new PCIe External Cable standard 4.0, the MXH932 card will initialize CMI communication to the link partner. The card can be connected to an MXH932 in Target mode or any PCIe device compliant to the new cable standard.

Active Optical PCIe Cables (AOC)

Dolphin offers active optical PCIe fiber cables up to 100 meters for the MXH932 cards. CWAKE and CPOWERON is not supported when using standard AOC cables. Please note: Long fiber optic cables will affect latency and throughput. Each meter adds 4-5 nanoseconds of latency.


CMI Functionality

The MXH932 BMC firmware release 2.8 and newer supports the following CMI operations:

- Publishes card and CMI status information in readable memory map
- Supports sending and receiving CMI reset, wake and power status messages
- Supports receiving indicators (LED/messages).

Installation

Step 1 - Unpack board

The MXH932 card is shipped in an anti-static bag to prevent static electricity damage. The card should only be removed from the bag after ensuring that anti-static precautions are taken. Static electricity from your clothes or work environment can damage your PCI Express adapter card or your PC. Always wear a grounded anti-static wrist strap while opening the PC and when the MXH932 is removed from the anti-static bag.  Unpack the MXH932 from the anti-static bag using proper anti-static procedures.

Step 2 - Change PCIe Bracket if necessary

The MXH932 package includes a standard and low-profile PCI Express bracket. By default, the standard height bracket is installed on the board. If you need to replace the mounted bracket with a low-profile bracket, carefully unscrew the two mounting screws to remove the full height bracket. Save the two mounting screws and replace the bracket with the low-profile bracket. Use the two mounting screws to install the low-profile bracket. The screws should be carefully tightened but be careful not to overtighten. Make sure you are properly grounded to avoid static discharges that may destroy the adapter card before performing this procedure.

Step 3 - Configure the Board for Proper Operation

Set the DIP switch settings for proper operation depending on the firmware. Please refer to the section Configuration and DIP Switches on page 12 for details.


Step 4 - Ensure proper Airflow

Please pay proper attention to ensure the selected server / slot position provides the minimum required airflow.

TIP: Immediately after software installation, please use the dis_diag tool to verify the temperature. If the chip temperature reported by dis_diag exceeds 95°C, it is strongly recommended to improve the airflow.

NOTE: Operating the card or AOC above the maximum specified operating temperature will void the warranty.

Step 5 - Install the Adapter Card

Before installing the adapter card, make sure you are properly grounded to avoid static discharges that may destroy your computer or the adapter card. Ensure you are properly grounded before opening your computer or the anti-static bag containing the MXH932. Please follow your computers or expansion chassis manual on how to install a PCI Express card. 

The MXH932 Adapter card can be installed into any PCI Express x16 slot. The MXH932 supports PCI Express Gen1, Gen2, Gen3 and Gen4 signaling. NOTE: A Gen3 slot is recommended as it typically doubles the performance compared to a Gen2 slot. The MXH932 is an x16 card, so maximum performance will only be attained if the slot provides full electrical x16 signaling.

The MXH932 supports hosts using either spread spectrum or constant frequency clocking. The card implements clock isolation.

Step 6 - Installing and Removing the Cable

Installing and removing cables should be done with both host and expansion system powered off. Please contact your Dolphin representative if you intend to continuously connect and disconnect the PCI Express cables.

Connecting the Cable

Please carefully install the cable connector into the connector housing on the MXH932 adapter card. Cable port 1 is located at the top of the PCIe bracket, ref Figure 1 PCIe Bracket to the right. To install the cable, match the cable house with the connector on the MXH932 adapter card. Use even pressure to insert the connector until it is secure. Adhere to ESD guidelines when installing the cables to ensure you don't damage the board. Note that for wider than x4 connections, the same cable-ports (i.e. port 1 to port 1, port 2 to port 2

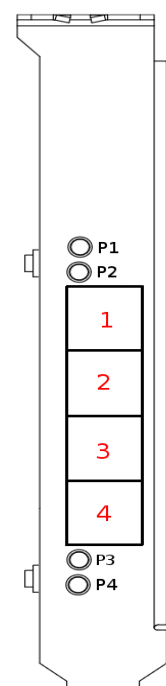


Figure 1 PCIe Bracket

through port 4) should be used on both host and target for each individual cable, to ensure that the cards properly link up as x8 or x16.

Cable strain relief

Strain-relief on the PCIe cables are important to protect the PCIe card from fatigue loading and damage. The cable should be mechanically connected to the rack or cabinet. This is especially important for long heavy cables and cables going between cabinets and racks.

Supported cable lengths

The MXH932 supports both copper and active optical PCIe cables (AOC). Maximum lengths between a MXH932 card and other Dolphin products can be found in Table 2 below.

Cable - SKU	Speed	Device	Device	Distance
PCIe4L-xM	PCIe 4.0	MXH932	MXH932	Up to 5 meters
PCIe4L-xM	PCIe 4.0	MXH932	MXH914-MXH919	Up to 5 meters
PCIe4L-xM	PCIe 4.0	MXH932	MXP924	Up to 5 meters
PCIe4L-xM	PCIe 4.0	MXH932	MXS924	Up to 2 meters
MSP4M-1M	PCIe 4.0	MXH932	Any Dolphin PCIe 4.0 product	Up to 102 meters
MTFCFF-xxxM	PCIe 4.0	MXH932	Any Dolphin PCIe 4.0 product	Up to 100 meters

Table 2: Cable Specifications

Disconnecting the Cable

Please carefully pull the release tab to release the cable from the locking latches and gently pull the cable out of the connector guides.

Step 7 - Verify Installation & LEDs

The MXH932 comes with 4 bi-color LEDs which show the corresponding cable port status according to Table 3: LED below.

The LEDs are visible through cut-outs in the PCIe bracket on each side of the cable connector block.

LED color	Function
Off	No cable installed
Yellow	Cable installed; no link
Yellow blink	Link reset
Yellow blinking	Temperature overheat warning, please immediately improve cooling to avoid thermal damages or system shutdown.
Green	Cable installed; link operational
Green blinking	Link operating at lower speed

Table 3: LED behavior

Operation

Configuration and DIP Switches

The MXH932 has one bank of 8 DIP switches. The default factory setting for the MXH932 is Transparent Host mode, single (up to x16) link connection.

The MXH932 has DIP switches for setting special modes or operations, the meaning of each DIP switch depends on the loaded firmware. Please carefully read the documentation shipped with the card before modifying any DIP switch settings. Please pay close attention to ON and OFF positions written on the DIP switch.

DIP Switches



Figure 2: DIP Switch shows the DIP switch for the MXH932. It is used to configure the adapter card. Please leave all undocumented DIP switches in the default position. Table 4: DIP Switch settings shows all the various DIP switch settings for the MXH932.

Figure 2: DIP Switch

DIP no.	Name	Description	ON	OFF	Default
1-5	OPT1-5	Configuration selector, details below			OFF
6	OPT6	Thermal Shutdown Disable.	Will disable thermal shutdown	Card will shut down on thermal overheat	OFF
7	MCU Reset	Holds the management processors in reset. Do NOT ACTIVATE without instructions from Dolphin.	Board management is held in reset	Normal operation	OFF
8	Reserved	Do NOT ACTIVATE without instructions from Dolphin.	Do not activate without instructions from Dolphin	Normal operation	OFF

Table 4: DIP Switch settings

Note: DIP switch configuration options may be changed in future versions. Please always consult the latest version of the MXH932 User Guide for details. The table above is valid for BMC version 2.8.

Thermal shutdown

The MXH932 card includes an overtemperature overheat protection. The BMC will automatically shut down the MXH932 card if a PCIe switch temperature beyond 105°C (221°F) is detected. Similarly, if an AOC is plugged in, the MXH932 card will automatically shut down if the max operating temperature announced by the connected AOC is violated by 15°C (59°F). Please consult the AOC data sheet for details.

NOTE: The MXH932 link LEDs will start flashing yellow when a PCIe switch temperature of 95°C (203°F) is reached or when the AOC has reached the max operating temperature. Please consult the AOC data sheet for details.

NOTE: The automatic shutdown can be disabled by setting DIP-Switch OPT6. Prior to disabling the automatic shutdown, please ensure you have established proper airflow. Operating the card or AOC above the maximum specified operating temperature will void the warranty.

NOTE: If the card shuts down due to an overtemperature situation – you must improve the cooling before completely power cycling the system.







DIP switch Settings

The following DIP Switch settings should be considered when configuring the **MXH932 for Transparent Host** operation:

NOTE: Revision Ax, Bx and Cx cards, prior to the volume production release shipped with default firmware version 1.0 to support a single x4, x8, or x16 link between two MXH932 cards. Please follow the instructions given in the MXH932 Firmware Release Note to upgrade the to the latest firmware to utilize transparent configurations.




DIP Switch settings for MXH932 Host operation

The following DIP Switch settings should be considered when configuring the **MXH932 for Transparent Host** operation:

Use Case	Configuration MXH932 Host	DIP ON	DIP switch view
A+D	Transparent Host One x16 downstream port (P1+P2+P3+P4) Hot Plug Enabled	(all off) (Shipping Default)	
A+D	Transparent Host One x16 downstream port (P1+P2+P3+P4) Hot Plug Disabled	OPT-4	
B	Transparent Host Two x8 downstream ports (P1+P2, P3+P4) Hot Plug Enabled	OPT-1	
B	Transparent Host Two x8 downstream ports (P1+P2, P3+P4) Hot Plug Disabled	OPT-1 OPT-4	
C	Transparent Host Four x4 downstream ports (P1, P2, P3, P4) Hot Plug Enabled	OPT-2	
C	Transparent Host Four x4 downstream ports (P1, P2, P3, P4) Hot Plug Disabled	OPT-2 OPT-4	

DIP Switch settings for MXH932 Target operation

The following DIP Switch settings should be considered when configuring the **MXH932 for Transparent Target** operation:

Use Case	Configuration MXH932 Target	DIP ON	DIP switch view
A	Transparent Target One x4 - x16 upstream port (P1+P2+P3+P4) One x16 downstream port – for use with e.g. IBP-G4X16-1	OPT-1 OPT-2	
F	Transparent Target One x4 - x16 upstream port (P1+P2+P3+P4) Dual x8 downstream ports – for use with e.g. IBP-G4X16-3	OPT 3	
G	Transparent Target One x4 - x16 upstream port (P1+P2+P3+P4) Quad xx downstream ports– for use with e.g. IBP-G4X16-5	OPT 1 OPT 3	

Transparent Use Cases

The MXH932 card may be used as both a Host card and a Target card. A Host and Target card can be used as a pair, or the Host card can be used with a PCI-SIG compliant Target device. The supported use cases and the DIP switch settings are summarized in section Configuration and DIP Switches on page 12.

Target Card Clocking Option

When the card is used in Transparent Target configuration, the default configuration settings will enable the card to provide a reference clock on the edge connector pins 13A + 14A.

Use Case A - 1 Host – Single Expansion Configuration PCIe x16

The Host system has an MXH932 adapter configured for Host operation and a direct x16 link to a MXH932 configured for Target operation. If you only need a x8 or x4 link, please configure according to use case B or C.

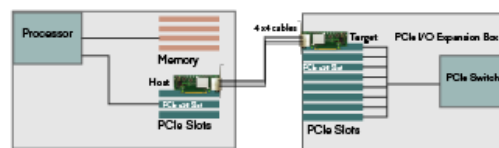


Figure 3: Use Case A

Host card ports	Target card ports
P1	P1
P2	P2
P3	P3
P4	P4


Table 5: Required x16 cabling

Always connect a cable from Port #x to Port #x

A failure connecting any of the cables will cause the link to re-train to x8 or x4.

Use Case B – 1 Host – Single or Dual Expansion Configuration – PCIe x8

The host has an MXH932 adapter configured for Transparent Host operation and a direct x8 link is used to connect one or two independent downstream target systems.

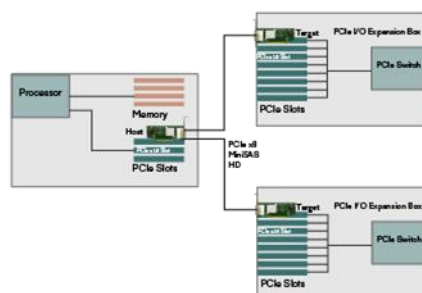

Host card ports	Target card 1 ports	Target card 2 ports
P1	P1	
P2	P2	
P3		P1
P4		P2

Table 6: Required x8 cabling

Use Case C – 1 Host - Quad Expansion Configuration – PCIe x4

The host has an MXH932 adapter configured for Transparent Host operation and 1-4 direct x4 links is used to connect 1-4 independent downstream target systems.

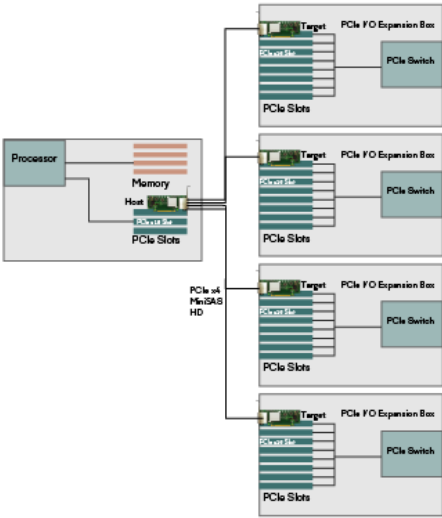



Figure 4: Use Case C

Host card ports	Target card 1 port	Target card 2 port	Target card 3 port	Target card 4 port
P1	P1			
P2		P1		
P3			P1	
P4				P1

Table 7: Required x4 cabling

Use Case D – 1 Host – Transparent fan-out using MXS924 - PCIe x16

The MXH932 is compliant with the MXS924 24 port PCIe switch. The switch enables large-scale Transparent PCIe fanout to hundreds of PCIe devices. Please find more details in the MXS924 Users Guide.

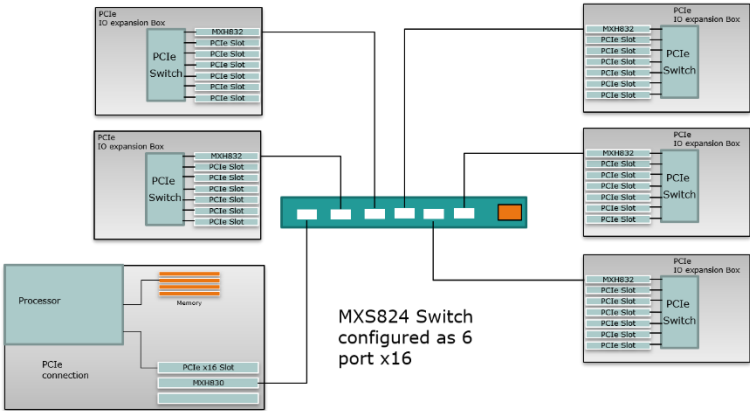

Use Case E – Multi Host – Transparent fan-out using MXS924 - PCIe x16

Please contact Dolphin for more information on how to configure the MXS924 and MXH932 for D-Switch mode. This configuration requires eXpressWare 5.20.0 or newer.

Use Case F – Transparent Target with two x8 Downstream ports

The MXH932 card with BMC firmware 2.8 supports splitting the downstream edge connector to support the IBP-G4X16-3 passive backplane and two x8 Plug-In adapter cards. Please consult the IBP-G4X16-3 Users Guide for more details.

Use Case G – Transparent Target with four x4 Downstream ports

The MXH932 card with BMC firmware 2.8 supports splitting the downstream edge connector to support the IBP-G4X16-5 passive backplane and four x4 Plug-In adapter cards. Please consult the IBP-G4X16-5 Users Guide for more details.

EEPROM and Firmware Upgrade

The MXH932 design uses a microcontroller to implement the PCIe CMI protocol and other maintenance functions. Dolphin may from time to time publish updated firmware for the Board Management Controller (BMC), PCIe switch or EEPROM data for the card.

WARNING: Please note that standard Microsemi tools (ChipLink) cannot be used to upgrade the firmware as this will violate the warranty. Please contact Dolphin for instructions on how to upgrade the MXH932 firmware.

Note: Please consult the MXH932 Firmware Release Note for details on supported configurations. The current BMC version is 2.8.

Identifying the Card

The card has a label-sticker with the serial number in the format 'MXH932-YY-ZZZZZ', where YY denotes the card revision (e.g. BB) and ZZZZZ denotes the serialized production number (e.g. 012345) – this whole string makes up the serial number of the card (i.e. MXH932-BB-012345).

You can also get this information using `lspci` in Linux:

First, identify the devices for the Dolphin Host card:

```
# lspci | grep "Device 4036"
```

```
01:00.0 PCI bridge: PMC-Sierra Inc. Device 4036
```

```
01:00.1 Bridge: PMC-Sierra Inc. Device 4036
```

```
02:00.0 PCI bridge: PMC-Sierra Inc. Device 4036
```

Then run `lspci` and identify the card. It will show up as something like

```
# lspci -s 1:0.0 -v
```

```
01:00.0 PCI bridge: PMC-Sierra Inc. Device 4036 (prog-if 00 [Normal decode])
```

```
Flags: bus master, fast devsel, latency 0, IRQ 122
```

```
Bus: primary=01, secondary=02, subordinate=03, sec-latency=0
```

```
I/O behind bridge: 00002000-00002fff
```

```
Prefetchable memory behind bridge: 00000000c8000000-00000000c81ffff
```

```
Capabilities: [40] Express Upstream Port, MSI 00
```

```
Capabilities: [7c] MSI: Enable+ Count=1/8 Maskable- 64bit+
```

```
Capabilities: [8c] Power Management version 3
```

```
Capabilities: [94] Subsystem: Dolphin Interconnect Solutions AS Device 0932
```

```
Capabilities: [100] Advanced Error Reporting
```

```
Capabilities: [148] Power Budgeting <?>
```

```
Capabilities: [158] #12
```

```
Capabilities: [188] #19
```

```
Capabilities: [1b4] Device Serial Number 00-00-43-43-00-00-00-24
```

```
Capabilities: [1c0] Latency Tolerance Reporting
```

```
Capabilities: [1c8] Access Control Services
```

```
Capabilities: [1f0] #25
```

```
Capabilities: [1fc] #26
```

```
Capabilities: [23c] #27
```

```
Capabilities: [7f8] Vendor Specific Information: ID=ffff Rev=1 Len=808 <?>
```

```
Kernel driver in use: pcieport
```

```
Kernel modules: shpchp
```

Second, do

```
# lspci -s 1:0.0 -v | grep -E "Subsystem|Serial"
Capabilities: [a4] Subsystem: Dolphin Interconnect Solutions AS Device 0932
Capabilities: [100] Device Serial Number 00-00-42-42-00-00-00-ff
```

This shows the card as revision 0x4242 (hexadecimal values of the 'BB' letters in the ASCII table), with the production number 0x000000ff (00000255 in decimal).

Support

More information about the product, support and software download can be found at <http://www.dolphinics.com/mx>.

For general support questions, please contact Dolphin via the Jira Service Management portal: <https://www.dolphinics.com/csp>.

Technical Information

Board revision history

The following table gives a general overview of the hardware revision history. Please consult the MXH932 PCN available from Dolphin for details.

Adapter card revision	Capabilities
MXH932-CC	<ul style="list-style-type: none">Initial product version
MXH932-CE	<ul style="list-style-type: none">Adds support for AOC
MXH932-DD	<ul style="list-style-type: none">New SFF-8644 connector due to EOLReplace PCIe oscillator with lower jitter variant (Si52254A)
MXH932-DE	<ul style="list-style-type: none">Replaced AOC current limiter due to long lead time

Simplified schematics

The figure below shows the MXH932 simplified schematics. Only the main functions are shown.

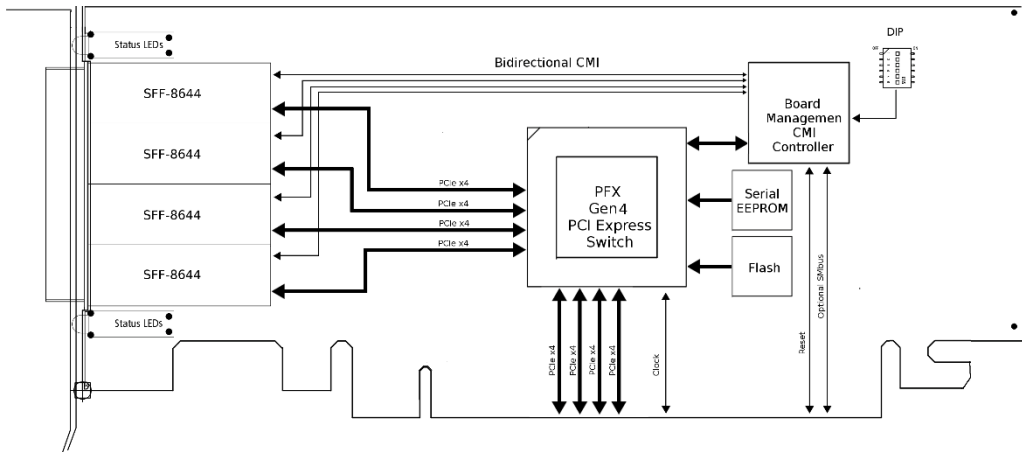


Figure 5: MXH932 Simplified Schematics

PCIe Cable Port Signals

The external PCI Express SFF-8644 cable connector supports the following signals:

- PETpN/PETnN: PCI Express Transmitter pairs, labeled where N is the Lane number (starting with 0); “p” is the true signal while “n” is the complement signal.
- PERpN/PERnN: PCI Express Receiver pairs, labeled where N is the Lane number (starting with 0); “p” is the true signal while “n” is the complement signal.
- PWR: Power to support AOC and signal conditioning components within the cable assembly.
- MGTPWR: Power supplied to the connector for cable management components that are needed while the link is not active. This needs to be active if the subsystem has power.
- CBLPRSNT#: Cable present detect, an active-low signal pulled-down by the cable when it is inserted into the MXH932 connector.
- CADDR: Signal used to configure the upstream cable management device address.
- CINT#: Signal asserted by the cable assembly to indicate a need for service via the CMI controller.
- CMISDA: Management interface data line. Used for both initial link setup and sideband messages when used with CMI compliant cables.
- CMISCL: Management interface clock line. Used for both initial link setup and sideband messages when used with CMI compliant cables.

External PCIe x4 Cable Connector Pin-Out

					Column				
Row	9	8	7	6	5	4	3	2	1
D	GND	PETn2	PETp2	GND	PETn1	PETp1	GND	MGTPWR	PWR
C	GND	PETn3	PETp3	GND	PETn0	PETp0	GND	CMISDA	CMISCL
B	GND	PERn2	PERp2	GND	PERn1	PERp1	GND	CBLPRSNT#	PWR
A	GND	PERn3	PERp3	GND	PERn0	PERp0	GND	CINT#	CADDR

Table 8; External PCIe x4 cable Pin-Out

PCIe Cable Port Mapping

The MXH932 card has a quad SFF-8644 connector. The table below show the signal / port map.

Cable Port	x16	Dual x8	Quad x4	PCIe 3.0 Cable Pin
1	L0	L0	L0	TX0/RX0
	L1	L1	L1	TX1/RX1
	L2	L2	L2	TX2/RX2
	L3	L3	L3	TX3/RX3
2	L4	L4	L0	TX0/RX0
	L5	L5	L1	TX1/RX1
	L6	L6	L2	TX2/RX2
	L7	L7	L3	TX3/RX3
3	L8	L0	L0	TX0/RX0
	L9	L1	L1	TX1/RX1
	L10	L2	L2	TX2/RX2
	L11	L3	L3	TX3/RX3
4	L12	L4	L0	TX0/RX0
	L13	L5	L1	TX1/RX1
	L14	L6	L2	TX2/RX2
	L15	L7	L3	TX3/RX3
Lx – PCIe lane X, Cable port is ref PCIe bracket marking				

Table 9 : PCIe Cable Port Mapping

MXH932 PCIe x16 Edge Connector Pin-Out

The MXH932 Edge connector follows PCI Express CEM Specification, Rev. 4.0 section 6 – Card Connector Specification. Signal names are shown in Table 10. In host mode, the MXH932 is PCIe SIG compliant. The signals in **bold** are bi-directional, where the direction depends on if the card is configured for host or target mode. In the case where the MXH932 is configured as a target adapter in an expansion chassis, it will provide a 100 MHz, non-SSC, reference clock on the REFCLK+/REFCLK- pins. The shaded signals TDI and TDO are normally tri-stated but can be configured to provide an alternative 100 MHz, non-SSC, reference clock for PCIe expansion chassis utilizing these pins instead.

Pin	Side B	Note	Side A	Note
1	+12		PRSNT1#	
2	+12		+12	
3	+12		+12	
4	GND		GND	
5	SMCLK	BMC	TCK	NC
6	SMDAT	BMC	TDI	O Ref clock
7	GND		TDO	O Ref clock -
8	+3,3V	PWR	TMS	NC
9	TRST#	NC	+3,3	PWR
10	+3,3V aux	Standby	+3,3	PWR
11	WAKE#	Wake up	PERST#	Reset
12		NC	GND	
13	GND		REFCLK+	Ref clock +
14	PERp0		REFCLK-	Ref clock -
15	PERn0		GND	
16	GND		PETp0	
17	PRSNT2#		PETn0	
18	GND		GND	
19	PERp1			NC
20	PERn1		GND	
21	GND		PETp1	
22	GND		PETn1	
23	PERp2		GND	
24	PERn2		GND	
25	GND		PETp2	
26	GND		PETn2	
27	PERp3		GND	
28	PERn3		GND	
29	GND		PETp3	
30		NC	PETn3	
31	PRSNT2#		GND	
32	GND			NC
33	PERp4			NC
34	PERn4		GND	
35	GND		PETp4	
36	GND		PETn4	
37	PERp5		GND	
38	PERn5		GND	
39	GND		PETp5	
40	GND		PETn5	
41	PERp6		GND	
42	PERn6		GND	
43	GND		PETp6	

Pin	Side B	Note	Side A	Note
44	GND		PETn6	
45	PERp7		GND	
46	PERn7		GND	
47	GND		PETp7	
48	PRSSNT2#		PETn7	
49	GND		GND	
50	PERp8		NC	
51	PERn8		GND	
52	GND		PETp8	
53	GND		PETn8	
54	PERp9		GND	
55	PERn9		GND	
56	GND		PETp9	
57	GND		PETn9	
58	PERp10		GND	
59	PERn10		GND	
60	GND		PETp10	
61	GND		PETn10	
62	PERp11		GND	
63	PERn11		GND	
64	GND		PETp11	
65	GND		PETn11	
66	PERp12		GND	
67	PERn12		GND	
68	GND		PETp12	
69	GND		PETn12	
70	PERp13		GND	
71	PERn13		GND	
72	GND		PETp13	
73	GND		PETn13	
74	PERp14		GND	
75	PERn14		GND	
76	GND		PETp14	
77	GND		PETn14	
78	PERp15		GND	
79	PERn15		GND	
80	GND		PETp15	
81	PRSNT2#		PETn15	
82		NC	GND	

Table 10: PCIe Edge Connector Pin-Out

Compliance and Regulatory Testing

EMC Compliance

The Dolphin PCI Express MXH932 adapter is tested to PASS the following relevant test standards for PCI Express cards, telecommunication and industry equipment installed in a standard PC:

- EN 55032:2012,
- EN 55035:2017,
- EN 61000-3-2:2014,
- EN 61000-3-3:2013
- 47 CFR Part 15, Subpart B (Clause 15.107 and 15.109) in conjunction with ANSI C63.4:2014
- CISPR 35:2016 Edition 1.0 (CISPR/11/412/CDV)
- Korean Harmonized standard, KN 35



This does not ensure that it will comply with these standards in any random PC. It is the responsibility of the integrator to ensure that their products are compliant with all regulations where their product will be used.

RoHS Compliance

The Dolphin MXH932 is RoHS compliant. A Compliance certificate issued by the manufacturer is available upon request.



FCC Class A

This equipment is tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules.



WEEE Notice

The adapter card is labelled in accordance with European Directive 2002/96/EC concerning waste electrical and electronic equipment (WEEE). The Directive determines the framework for the return and recycling of used appliances as applicable throughout the European Union. This label is applied to products to indicate that the product is not to be thrown away but returned to your local approved WEEE waste collector.



Limited Warranty

Dolphin Interconnect Solutions warrants this product to be free from manufacturing defects under the following terms:

Warranty Period

The warranty applies for one (1) year from the date of purchase. Extended warranty is available.

Coverage

To the extent permitted by applicable law, this warranty does not apply to:

- Damage caused by operator error or non-compliance with instructions available for the product.
- Use or attempt to use or program firmware not approved by Dolphin.
- Damage due to accidents, abuse, misuse, improper handling or installation, moisture, corrosive environments, high voltage surges, shipping, or abnormal working conditions.
- Damage caused by acts of nature, e.g. floods, storms, fire, or earthquakes.
- Damage caused by any power source out of range or not provided with the product.
- Normal wear and tear.
- Attempts to repair, modify, open, or upgrade the product by personnel or agents not authorized by Dolphin.
- Products for which the serial number label has been tampered with or removed.
- Damage to the product caused by products not supplied by Dolphin.

Service Procedure

In the event that the product proves defective during the Warranty Period, you should contact the seller that supplied you with the product, or if you purchased it directly from Dolphin, visit <https://www.dolphinics.com/csp> to obtain a valid RMA number and instructions. Products returned to Dolphin without a proper RMA number will not be serviced under this warranty.